

Karbonn K36*
Dual SIM Phone
User Manual

General Information

Thank you for selecting our mobile phone. This user guide will provide you with the general information and operation instructions.

Note:

- Use only accessories approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.
- If the contents and displays described in this user guide do not match the actual operation of the phone set, please use the display of the actual phone set.
- We reserved the rights to change the mechanisms of the phone & content of this manual without prior notice.
- This user guide is subject to change without notice.

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.
- The highest SAR value of the device is **0.564 W/kg** respectively averaged over 1 gm of human tissue.

ROHS Declaration**Declaration of Conformity with the requirements of the e-waste Management Rules, 2011 (adopted by Notification S.O.1035 (E) of Ministry of Environment and Forests)**

The Product is in conformity with the requirements of Rule 13 of the e-waste Rules. The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the e-waste Rules:

1. Lead (Pb) – not over 0.1% by weight;
2. Cadmium (Cd) – not over 0.01% by weight;
3. Mercury (Hg) – not over 0.1% by weight;
4. Hexavalent chromium (Cr6+) – not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) – not over 0.1% by weight.



Note: User's Manual is just to guide the user about the functionality of the phone. Some functions may vary due to modifications and up gradations of software or due to print mistake.

Contents

Keys functions	5
Getting Started	6
Menu options.....	9
Call	9
Call History	9
Phonebook	9
Multimedia	9
Messages.....	10
Tools	11
Fun	11
File Manager	11
Settings.....	13
Karbonn live	11
txtWeb.....	12
SAFETY PRECAUTIONS.....	13

Keys functions

Keys	Functions
------	-----------


Right soft key	Press this key to enter phonebook list under standby mode; Press this key to go back to previous menu; Press this key to reject a call.
Dial key	Press this key to SIM1 or SIM 2 call out; Press to pick up phone when there is an incoming call; Press to enter call logs under standby mode
End key	Power Off: Long press to power off under standby mode; Power On: Long press to power on if the phone is power off; Press this key to go back to standby screen.
Navigation keys	Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate. Under standby mode, press a direction key to enter the specified function page. You can also customize direction keys to match the desired functions. In conversation status, press up or down direction key to tune the sound volume.
OK key	Press OK key to confirm and enter main menu.
Number keys	Dial numbers under standby mode and enter numbers and characters in editing mode.
* key	Under standby mode, press * key twice to display “+” to call international numbers; Under players and FM mode, press * key to decrease volume.

# key	Under standby mode, press and hold this key to switch between current profile and silent profile. Under players and FM mode, press # key to increase volume.
0 key	Torch On: Long press to get the torch on; Torch Off: Long press to get the torch off;


Getting Started

Inserting the SIM Card and the battery

1. Remove the back cover (1), remove the battery (2), and insert the SIM card (3)

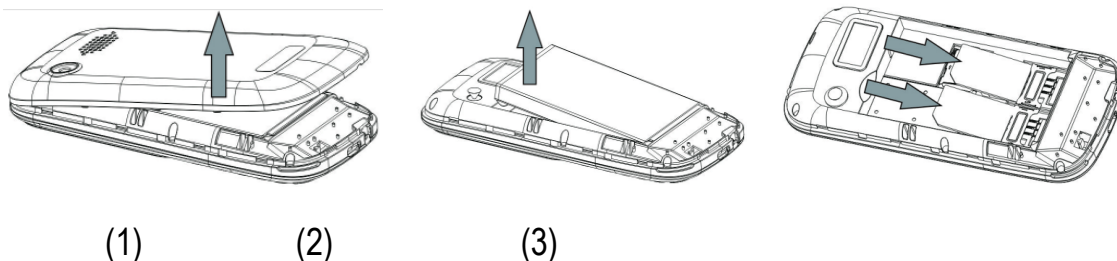

2. Install the battery and back cover

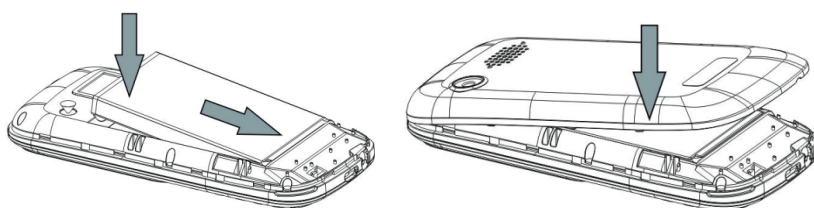

Warning:

(1) There may be the risk of explosion if the battery is replaced by the wrong type.

(2) Dispose of used batteries according to the guidelines.

Inserting a T-Flash (External Memory) Card


Turn off the Mobile Phone, and take out the battery.

Keep the gold color side of the SIM card downward, and slide it gently to the right place.

1. Power off the Mobile Phone, and take out the battery or any other electrical supply.

Keep the golden color side of the Memory card downward, and push it gently to the right place.

2. Before take out off the memory card, be sure to Power off the Mobile Phone and remove the battery first.

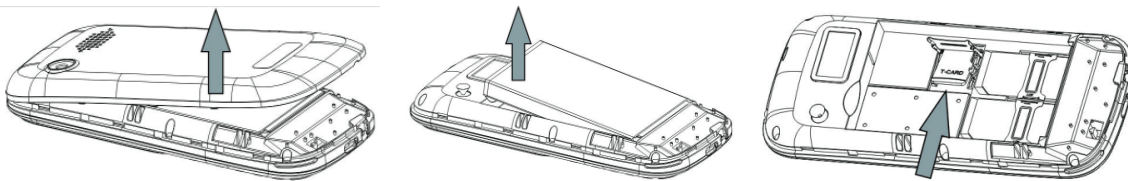

Turning the phone on

Press and hold End/Power key to turn on/off the Mobile Phone.

And if you have set PIN or Mobile Phone code, input it correctly.

Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.



Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

The socket-outlet shall be installed near the equipment and shall be easily accessible

Warning: Provides charging temperature range -5 °C to 55 °C, over this range, please do not use the charging equipment. And be sure to use the charger provided by the supplier. Use of an unapproved charger may be dangerous and breach of warranty of the equipment approval and

terms.

Important Password

Default Phone lock password is 1122.

Keypad Lock and Unlock

Press the Left Soft Key then * key to unlock the keypad.

Text Entry

Input Method

Your cellular phone supports several input methods, which include:

ABC/Abc/abc/Hi

Numeric(123)

1. Changing the input modes

During text editing, you can press the # key to switch input modes.

2. Entering Symbols

In any input mode, press the * key to open the symbols input screen. Use the Navigation key to choose the desired symbol and press the Ok key to select it.

Key Input

Letters and symbols represented by each key are as follows:

KeyFunction

Key	Function
All related keys	Press to input letters

0 Key	Press to input space
# Key	Switch between input modes
* Key	Press to enter symbol screen

Example: How to enter the word "Happy2014!"

Press the # Key to activate the "ABC" mode, press the 4 Key to enter "H".

Press the # Key to activate the "abc" mode, press the a, p, p, y key to enter "appy".

Press the # Key to activate "123" mode, press the 2, 0, 1, 2 Key to enter "2014".

Press the * Key to enter symbol "!" .

Other Language Input Methods

Your phone supports Hindi input language. You can press the # key to switch to "Hindi" mode when editing text.

Menu options

Call

Under standby interface, input a phone number and press Dial key to make a call by SIM1/SIM2. To end or reject a receiving call, press the End key.

Call History

- ◆ In this menu, you can view dialed calls/missed calls/ received calls /delete call logs/Call Timers/call cost and Text msg. counter.

Phonebook

In Phonebook, you can save contacts in phone memory, while SIM cards contact capacity depends on the network operator, please consult the local operator.

Multimedia

Camera: Camera supports photographing function .you can take pictures with the embedded camera and adjust the camera settings. The camera lens is in the rear side of the mobile phone and the screen is the viewfinder window. The pictures are taken in JPG format.

Image Viewer: With this function, you can select any picture and press options to perform the following operations: Send, Slide play, Delete, Set image as wallpaper, Rename, Mark, Details, Slide settings.

Video Recorder: Press OK key to start video recording. The recording time depends on the time limit and the capacity of the memory card. Enter options to perform the following settings: Video settings and Storage.

Video Player: Enter Video player. Press left soft key to enter options: Play list, Full screen Play, File attribute.

Audio Player: Enter Audio player. Press left soft key to enter options: Music list, Music mark, Add, Set as ringtone, Play mode, Settings and Exit.

FM Radio: To use the FM Radio, please insert the earphone first and then listen to it. You can perform the followings operations as your need: Channel list, Manual input, Auto search, Record and File list.

Sound Recorder: Enter Sound recorder. Enter Sound Recorder, press left soft key and you can do: New record, Play, Delete, Send, Record file List.

Messages

Enter this menu, you can view: Write message, Inbox, Drafts, Outbox, Sent messages, Broadcast messages, SMS templates, SMS settings and SMS schedule. The capacity of messages is due to maximum storage capacity built in mobile phone and external SIM cards. And you can check the memory status of the SIM cards or mobile phone.

Tools

This function provides different kinds of services including Torch, Alarm, BT, Calendar, Calculator and STK. It is convenient and good for you to arrange your life orderly every day and make your life become lively and beautiful.

BT: You can use the BT to send images, video clips, music, sound clips and notes, and transfer files from your compatible pc

Fun

This phone provides a Snake game for fun.

File Manager

File Manager explores the files in phone and external memory card. In this menu, you can manage the pictures, MP3 files and other folders.

Settings

- ◆ Profiles: This mobile phone is provided with several profiles. You can customize the ringtone according to events and environment. You can customize a profile and activate it. Available options are: General, Silent, Meeting, Outdoor and Earphone.
- ◆ Phone settings: In this menu, you can perform: Time and date; Select Language; Shortcut Settings; Schedule power on/off; Display; Mobile phone supports two system languages: English and Hindi. The default language is English.
- ◆ Network settings: You can set the network for SIM1 and SIM2 here.
- ◆ Security Settings: To protect personal privacy, you can set the SIM1/SIM2 security; Phone security; Screen auto lock; Mobile tracker and Data protection.
- ◆ To reset to factory setting, please input the password '1122'.

Karbonn live

It is Karbonn powered SMS store application.

txtWeb

txtWeb is an SMS app store with 3,500+ apps. It's funny to use.

- ◆ SAFETY PRECAUTIONS
-

Precautions

 Please carefully read and observe the terms below:

Safe power on

Do not use your mobile phone in areas that prohibit their usage. It may cause disturbance or harm.

 Safe transportation first

Please observe all related local laws and regulations.

Do not use your mobile phone while driving.

Safe transportation should be considered first when driving.

 Turn off when in the hospital

Please follow related limitations.

Please switch your cellular phone off when near a medical instrument.

 Turn off on an airplane

Please follow related limitations.

Do not use your cellular phone on an airplane.

 Turn off when at a gasoline station

Do not use your cellular phone at a filling station or around fuels or chemicals.

 Turn off around exposure Area

Please observe related limitations and do not use your cellular phone near an area where explosions can occur.

Proper use



As described in this manual, your cellular phone can be used only in the correct location.

If possible, please do not touch the antenna area of your phone.

Use qualified after sales service



Only a qualified technician can install or repair your cellular phone. Please contact a Karbons authorized service center in case of phone failure.

Accessories and batteries



Only use the authorized accessories and batteries and do not connect to incompatible manufacturers or products.

Waterproof



Your cellular phone is not waterproof. Please keep it away from water.

Backup



Remember to backup or keep a written record of all important information saved in your cellular phone.

Connect to other devices



Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.

SOS emergency calls



Make sure your cellular phone is switched on and in a service area. In standby mode, input the SOS number, then press the Dial Key. Advise where you are and do not hang up without permission.